

PIONEER

PDP-4214

Press the {INPUT} button on the remote.  
The input list will come up.  
Then press the {0} {9} {1} {7} buttons on the remote.  
To exit, press the {EXIT} button on the remote.

You can also press the back button when you are  
in each category to get back to the main menu.

#### 4th / 5th / 6th / 7th GENERATION MODELS

Make sure the Plasma and the Media Box are in standby.  
Using the remote control:  
Press {DISPLAY} button (just press, do not hold) and wait 3 seconds.  
Press {LEFT} {UP} {LEFT} {RIGHT} {POWER} buttons.  
The Plasma will turn on with the "Information" page displayed.  
Press {MUTE} to move through the levels of menus:

INFORMATION  
FUNCTION CHECK  
COMMON ADJ  
OPTION  
INITIALIZE

Press the {DOWN} button to move through individual menus.  
To exit, power it down.

#### 3rd GENERATION MODELS

Power Down at the panel.  
Hold down {INPUT} & {VOL+} buttons on the panel.  
Turn on the Plasma at the panel.  
The service menu will come up.  
Scroll down using the arrow keys.  
To exit, power it down.