

HITACHI

RPTVs :

F59 SERIES

Press and hold the {MENU} button on the TV.

Then press the {MENU} {8} {SELECT} buttons on the remote.

To exit, press the {MENU} button on the TV or the {EXIT} button on the remote control.

DCAM Mode:

Using the remote control:

Hold down the {TV} button.

Press the {MENU} button.

Press the {INFO} button.

Release the {TV} button.

Remote Control Key Functions When In DCAM Mode:

{INPUT}	Blue (13x9 adjust)
{ASPECT}	ROM Write
{DAY/NIGHT}	ROM Read
{MENU}	Remove Color
{EXIT}	Cross Hatch/Video Mode
{INFO}	Green
{GUIDE}	Calculation
{2}	Cursor UP
{5}	Cursor DOWN
{6}	Cursor RIGHT
{4}	Cursor LEFT
{0}	RED (7x5 Adjust)
{STOP}	Initialize
{PLAY}	Raster Position
{FAST FORWARD}	Phase

To Exit The DCAM Mode:

Press and hold the {TV} button.

Press the {0} button.

Press the {1} button.

Release the {TV} button.

PROJECTORS :

Press the {MENU} & {RESET} buttons and then press the {RESET} button again and hold it for at least 5 seconds.

The Service Menu will be displayed.

To exit, turn the Projector Off.

MISC :

1.

Turn the TV on.

Press the {MENU} {MENU} {8} {SELECT} buttons on the remote.

The Service Menu will be displayed.

Use the {UP} {DOWN} buttons to select items.

Use the {LEFT} {RIGHT} to change the data.

Press the {EXIT} button to exit the Service Menu.

2.

Turn the TV off.

Press and hold the {INPUT} button on the TV then press {POWER}.

Hold both buttons until the TV powers on
with the Service Menu displayed.

Use the {UP} {DOWN} buttons to select items.

Use the {LEFT} {RIGHT} to change the data.

Press the {EXIT} button to exit the Service Menu.

3.

Turn the TV off.

Press {POWER} & {INPUT} buttons on the TV for more than 3 sec.

The Service Menu will be displayed.

The letter "P" indicates picture and "A" indicates audio.

Use the {UP} {DOWN} buttons to select items.

Use the {LEFT} {RIGHT} to change the data.

Press the {EXIT} key to exit the Service Menu.