

TOSHIBA

Turn the TV on.

Press the {MUTE} button three times on the remote.

Press the {MUTE} button again on the remote and hold.

Then press the {MENU} button on the TV's front panel.

Release both buttons

There should be a letter "S" on the upper right of the screen.

Press the {MENU} button on the TV's front panel again.

You are now in Service Menu.

Use the {CH+} or {CH-} buttons to select the item.

Use the {VOL+} and {VOL -} buttons to adjust the value.

Turn the set off to exit the Service Menu.

Turn the TV on.

Press and hold the {VOL-} button on the TV.

Press and hold the {9} button on the remote.

The Service Menu will be displayed.

Use the {CH+} or {CH-} buttons to select the item.

Use the {VOL+} and {VOL -} buttons to adjust the value.

Turn the set off to exit the Service Menu.

LCDs :

Press the {MENU} button on the remote.

Highlight the "Picture" icon.

Press the {9} {3} {0} {1} buttons on the remote control.

The Service Menu will be displayed with the following Modes:

"Options" - "Adjustments" - "Selections"

Use the {OK} button to access and navigate through these Modes.

To change values use {VOL +} {VOL-} {P+} {P-}

To exit, press the {MENU} button.