

## SAMSUNG

Turn on the TV and select the input that you want to adjust.  
Turn the display off.

In quick sequence on the remote press:  
{MUTE} {1} {8} {2} {POWER} buttons.

The TV will turn On with the Service Menu displayed.  
ADJUSTMENT - TEST PATTERN - SET OPTION BYTE - FACTORY RESET

Select the function and use the {VOL+} button to enter.  
Save settings and exit by pushing {MUTE} twice then {POWER}

With the TV in standby, press the  
{INFO} {MENU} {MUTE} {POWER} buttons on the remote.

The TV will turn On with the Service Menu displayed.  
Press the {POWER} button to exit the Service Menu.

With the TV in standby, press the  
{DISPLAY} {P.STD} {MUTE} {POWER} on the remote.

The TV will turn On with the Service Menu displayed.  
Use the {CH+} {CH -} buttons to select items.  
Use the {VOL+} {VOL -} buttons to adjust.  
Press the {POWER} button to exit the Service Menu.

With the TV in standby, press the  
{P.STD} {HELP} {SLEEP} {POWER} buttons on the remote.  
or  
{P.STD} {MENU} {SLEEP} {POWER} buttons on the remote.

The TV will turn On with the Service Menu displayed.  
Use the {CH+} {CH -} buttons to select items.  
Use the {VOL+} {VOL -} buttons to adjust.  
Press the {POWER} button to exit the Service Menu.

With the TV in standby, press the  
{SLEEP} {P.STD} {MUTE} {POWER} on the remote.

The TV will turn On with the Service Menu displayed.  
Use the {CH+} {CH -} buttons to select items.  
Use the {VOL+} {VOL -} buttons to adjust.  
Press the {POWER} button to exit the Service Menu